


**MODELS  
T5090816  
T5590816  
H5593016**

**PARTS DRAWING**

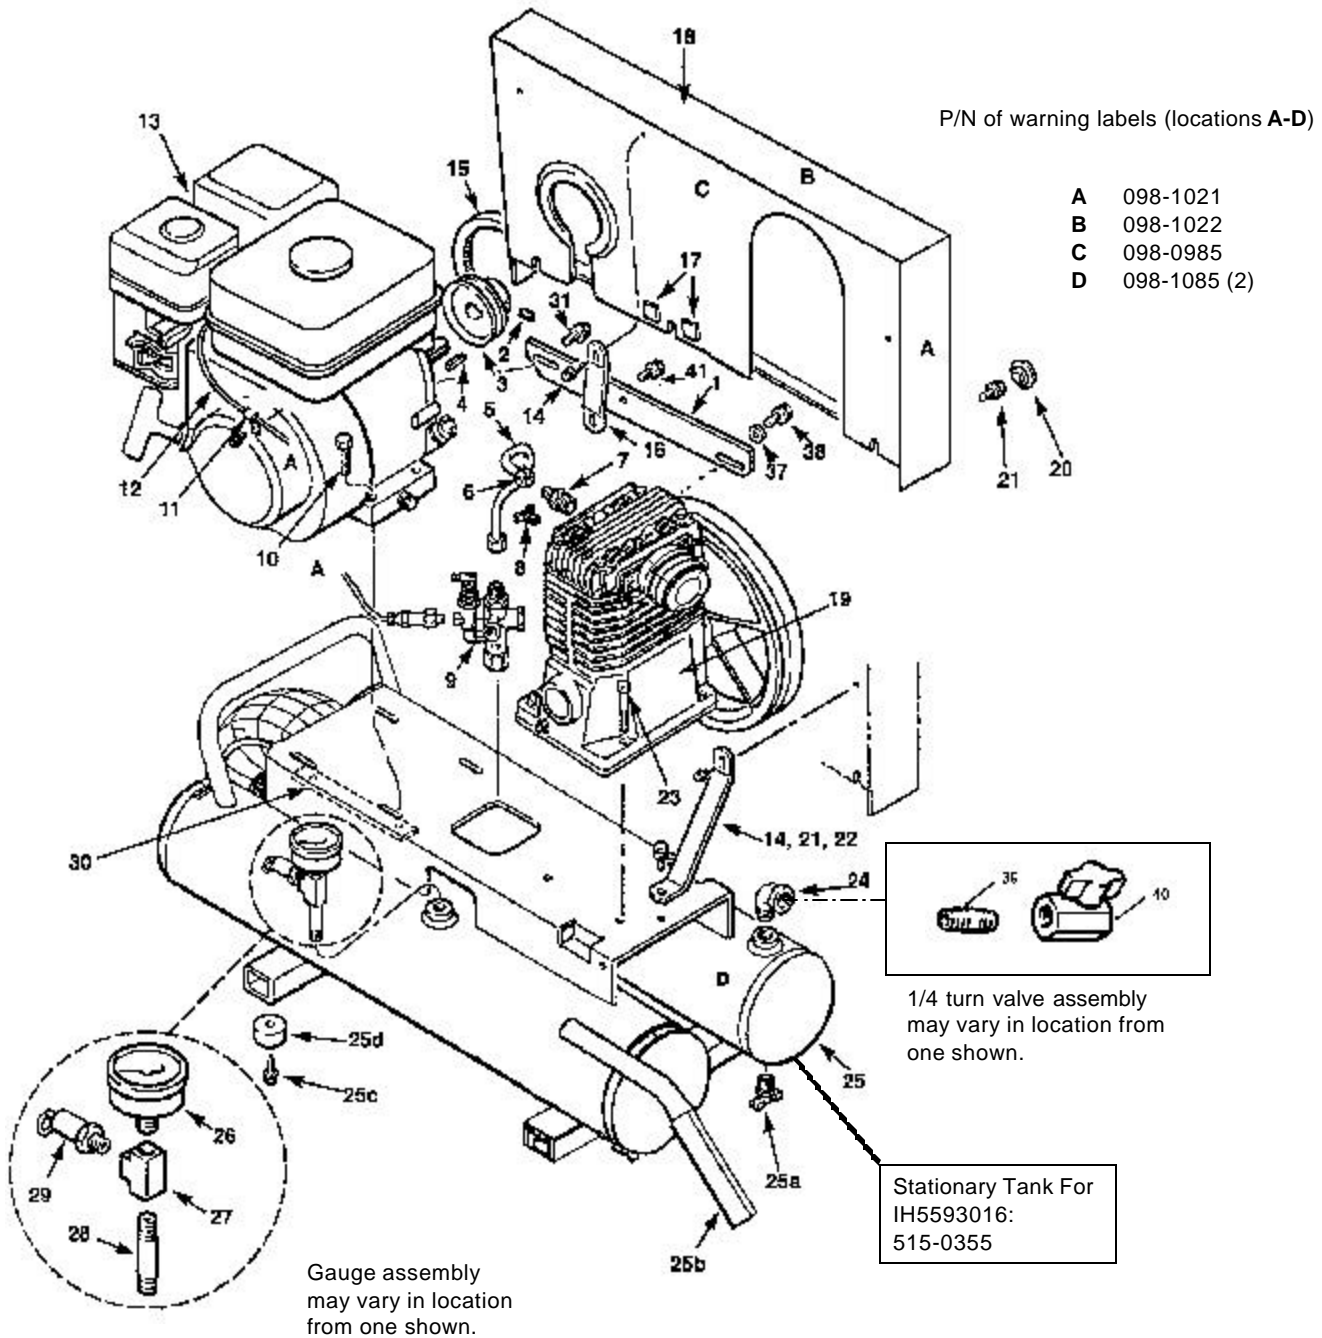

**MODELS**  
**T5090816**  
**T5590816**  
**H5593016**

**SERVICE PARTS LIST**

<u>Item</u>	<u>Part No</u>	<u>Qty</u>	<u>Description</u>
1	114-0101	1	Bar, stabilizer
2	061-0006	1	Setscrew 5/16" x 3/8"
3	006-0091	1	Pully
4	146-0016	1	Key, 3/16" sq x 1" lg
5	◆●□ 145-0317	1	Tube, transfer, copper
	■ 145-0295	1	Tube, transfer, copper
6	058-0016	2	Compression nut
7	068-0009	1	Connector, male
8	072-0002	1	Valve, cold start
9	◆●□ 070-0055	1	Unloader
	■ 070-0051	1	Unloader
10	059-0011	4	Screw, 5/16" x 1 1/4" lg
11	103-0054	1	Clamp, cable
12	◆●□ 026-0237	1	Cable, throttle
	■ 026-0235	1	Cable, throttle
13	◆■ 025-0017	1	Engine, gas, Honda
13	● 025-0016	1	Engine, gas, Briggs & Stratton
14	061-0055	2	Screw, #10 x 1/2" lg
15	◆■□ 007-0021	1	V-belt
15	● 007-0012	1	V-belt
16	114-0102	1	Bracket, belt guard
17	094-0010	2	Pad, vibration
18	◆●■ 142-0062	1	Beltguard
	□ 142-0079	1	Beltguard
19	040-0275	1	Pump (flywheel must be purchased separately)
20	093-0005	3	Plug, button
21	059-0012	4	Screw, 5/16" x 1/2" lg
22	◆●■ 114-0006	1	Bracket, beltguard
	□ 114-0129	1	Bracket, beltguard
23	059-0146	4	Screw, 5/16" x 2 1/4" lg
24	◆●■ 064-0050	1	Elbow, 90° x 1/2" NPT
25	◆● 150-0053	1	Tank assembly includes wheel & items 25a-25d
	■ 150-0065	1	Tank assembly includes wheel & items 25a-25d
	□ 515-0355	1	Stationary tank
25a	072-0001	2	Petcock, 1/4" NPT
25b	◆●■ 093-0030	2	Grip, black
25c	061-0036	4	Screw, #14 x 3/4" lg
25d	◆●■ 094-0009	4	Pad, vibration
26	032-0024	1	Gauge
27	069-0004	1	Tee, 1/4" NPT
28	065-0038	1	Nipple, 1/4" NPT x 3"
29	136-0005	1	Valve, pressure relief
30	114-0017	2	Bracket, engine
31	059-0149	1	Screw, 5/16" x 1/2" lg
37	◆■ 060-0083	1	Washer, locktooth
38	059-0258	1	Screw, 5/16-18 x 1.25"
39	065-0001	1	Nipple, 1/2" NPT x 1 1/2"
40	073-0008	1	1/4 turn valve
41	◆■ 061-0110	1	Screw, #10-32

◆ CT5590816 or HT5590816

● CT5090816

■ CT5590816.01

□ IH5593016

DATE 5/01/98

ORIGINAL